Lenco

PORTABLE CD/MP3 PLAYER

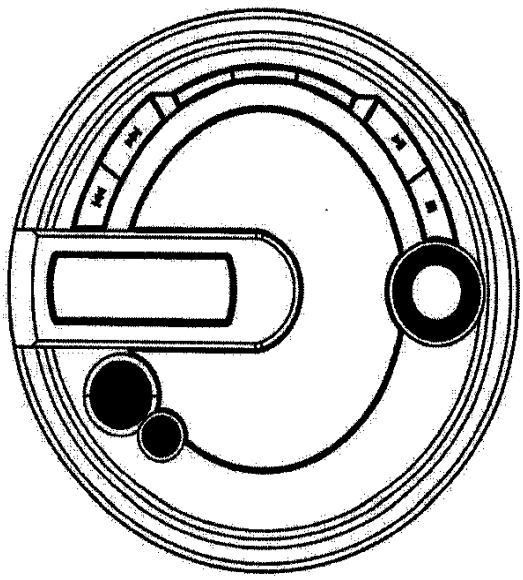

INSTRUCTION MANUAL

CDP-4520 MP3

LOCATION OF CONTROLS

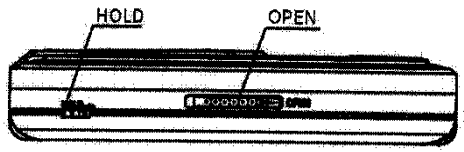

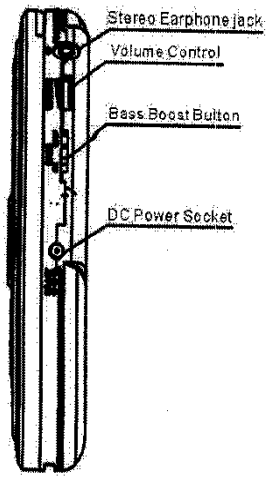

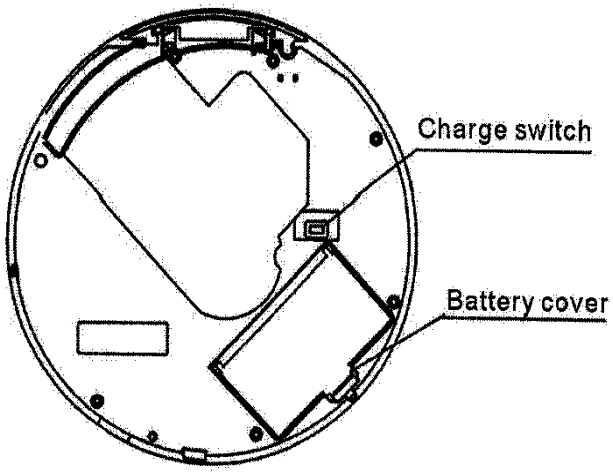

PLAYING AN AUDIO DISC

1. Connect the supplied earphone / headphone to the 'PHONES' jack.
2. Push the 'OPEN/CLOSE' slider to open the CD lid. Ensure that the cardboard 'mechanism protector' is removed inside the CD compartment before use.
3. Place an audio CD, printed side up, by pressing the CD onto the central hub. Close the CD lid until it clicks shut.
4. Ensure that the 'HOLD' button is not switched to the 'HOLD' position.
5. Press the 'PLAY/PAUSE' button, the display will show "READING", and then change to "CD", the number of tracks and CD length. This will then play the first song and display will show the current track number and elapsed playing time.
6. Press the 'PLAY/PAUSE' button to pause playback. To resume playback, press the 'PLAY/PAUSE' button again.
7. Press the 'STOP/OFF' button once to stop playback – the total CD playing time and the number of tracks on the CD is shown. Press the 'STOP/OFF' button again to switch the unit off. If the 'STOP/OFF' button is pressed once to stop CD playing, and no further buttons are pressed, the CD player will switch itself off after approximately 30 seconds to save energy.

PLAYING A MP3 DISC

1. Insert a MP3 disc into the compartment and close the lid.
2. Press the 'PLAY/PAUSE' button, the display will show "READING", and then change to "MP3", the number of albums, the number of tracks and track length. This will then play the first album and first track. Also, the display will show the filename, song title and the name of artist sequentially.
3. Press and hold 'ALBUM' button, it will enter into album mode. Press ⏮ or ⏭ to select the desired albums.
4. Press 'ALBUM' button again, it will enter into track mode. Press ⏮ or ⏭ to select the desired tracks.
5. Press the 'PLAY/PAUSE' button to continue playback from the selected album and track.
6. Press the 'STOP/OFF' button once to stop playback – the total number of albums and tracks are shown. Press the 'STOP/OFF' button again to switch the unit off. If the

'STOP/OFF' button is pressed once to stop CD playing, and no further buttons are pressed, the CD player will switch itself off after approximately 30 seconds to save energy.

TRACK SKIP PLAY

To skip a track during playback, briefly press ◀◀ or ▶▶ once or several times to the previous or next track. Playback will continue from the selected track and the current track number will be displayed.

To skip 10 tracks during playback, press +10 once to the next 10 tracks.

FORWARD / REVERSE SEARCH

To search for a particular part of a track while playing a disc, press and hold either the ◀◀ or ▶▶ ('SKIP/SEARCH') buttons. The CD player will scan the disc at high speed (either forwards or backwards). Release the button when the desired passage is reached – playback continues from this position.

PROGRAMMED PLAY

In case of audio disc
You can store up to 20 tracks to play in a program – a single track can be stored more than once.

1. During playback (function also operates while the CD is paused) press 'PROGRAM' button – the LCD display will show 'PROG', track '00' and program number '01'.
2. Press ◀◀ or ▶▶ to select the track you want to play.
3. Press 'PROGRAM' to store the track – the total number of stored tracks are displayed.
4. Select and store all the desired tracks in this way (up to 20 tracks).
5. Press 'PLAY/PAUSE' to start playback of your programmed tracks – 'PROG' is shown on the screen and playback will commence.
6. Once 'STOP/OFF' is depressed the program is cleared.

In case of MP3 disc

You can store up to 64 tracks to play in a program – a single track can be stored more than once.

7 In the "STOP" mode, press 'PROGRAM' button – the LCD display will show 'PROG', 'P-01' and album '01' will flash. Press ⏮ or ⏭ to select the album you want to play.
8 Press 'PROGRAM' again, the track '000' will flash. Press ⏮ or ⏭ to select the track you want to play.
9 Press 'PROGRAM' to store the track – the total number of stored tracks are displayed.
10 Select and store all the desired tracks in this way (up to 64 tracks).
11 Press 'PLAY/PAUSE' to start playback of your programmed tracks – 'PROG' is shown on the screen and playback will commence.
12 Once 'STOP/OFF' is depressed the program is cleared.

VOLUME / BASS

Adjust the volume by adjusting the volume control. There is also a bass boost function which enhances the BASS at lower volumes – this can be switched on/off by sliding the 'BASS BOOST' slider.

EQUALIZER MODE

There are five presets – DBB, POP, CLASSIC, JAZZ, ROCK and NORMAL giving you the freedom to shape the sound as you like. Press "EQ" button once to change from one preset to the next.

HOLD FUNCTION

The 'HOLD' switch is used to lock the buttons. When the CD player is playing, it also prevents the CD player to switch on accidentally when the CD player is in storage. To activate this function move the switch to the 'HOLD' position to lock the unit.

ADDITIONAL FEATURES

Repeat track
During playback, press 'MODE' until the "REPT 1" symbol is displayed on LCD - the selected track is played repeatedly.